

## Product Description:

Model Number: YET2130-Ver2.0

Color: Black, Red, Blue

Place of Origin: Guangdong, China

Material: ABS, Plastic, ABS

Code: Copy Code Optional

Button: 4 Buttons

Function: clone/ replace remote contrl

Frequency:280-868Mhz

Certificate: CE ROHS

Color: black/red/blue available; other green, champagne can be customzied

Battery: CR2032

Usage: garage door, alarm, automatic door, rolling door, etc.

Certification: CE



## Specification:

Model#	YET2130-Ver2.0
Frequency	280-868M Frequency Auto-Scan
Voltage	3V ( CR2032*1)
encode	Face to face clone
Working range	fixed code and rolling code in the market ( Most)
Material	ABS
Size	65.5*38.5*14mm
Product weight	16kg/500pcs ( carton size: 55*38*18cm)
package	1* remote control with color box + 1* clip
Installation	wireless
Radio transmission distance	50-100M ( Open area)
Application	garage door, alarm, automatic door, rolling door, etc
Noted:	<b>If you are not sure about compatibility. Please contact us.It can copy a lot of the brand.</b>

## Features

- 1.All of our items are brand new
- 2.One to one key copy
- 3.Each key password alone save 4 million times
- 4.Can continuous repetitive copy use one million times
- 5.Privacy is strong
6. A replacement for garage door remotes.
7. Multi-functional and multi-variable, personalized and user-friendly simple design and fast to use.
- 8.Clone 90% remote control in the market.

## **How to work?**

1. Press the remote controller first button, while press second button 3 times;
2. Release the two buttons, Now the LED light glows one time every three seconds;
3. Put the original remote controller in front of the new one, the distance about 2-3 centimeters
4. Press the original remote controller button that you want to copy, until the new remote controller LED light change its lighting frequency. (That is the LED light has regular quick flash)
5. When the LED light has regular quick flash, it means the codes have been copied. Press one button ( Button No.1/2/3/4) that you want the codes to be saved in, until the LED light turns off.
6. If the LED light has regular slow flash 6 times, it means that the copy is not done. And it will automatically exit the copy status. In this case, repeat the Step 1. The storage of remote control can be numerous rewritable. To repeat the second key, repeat the Step1.